

# Installation & Maintenance Manual

## MORI HR NEXT

### Alternate Flow Supply & Extract Fan with Heat Retention



**Read this manual carefully before using the product and keep it in a safe place for reference.**

This product was constructed up to standard and in compliance with regulations relating to electrical equipment and must be installed by technically qualified personnel. The manufacturer assumes no responsibility for damage to persons or property resulting from failure to observe the regulations contained in this booklet.

#### PRECAUTIONS FOR INSTALLATION, USE & MAINTENANCE

- The device should not be used for applications other than those specified in this manual.
- After removing the product from its packaging, verify its condition. In case of doubt, contact a qualified technician. Do not leave packaging within the reach of small children or people with disabilities.
- Do not touch the appliance with wet or damp hands/feet.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the product in the presence of inflammable vapours, such as alcohol, insecticides, gasoline, etc.
- If any abnormalities in operation are detected, disconnect the device from the mains supply and contact a qualified technician immediately. Use original spare parts only for repairs.
- The electrical system to which the device is connected must comply with regulations.
- Before connecting the product to the power supply or the power outlet, ensure that:
  - the data plate (voltage and frequency) correspond to those of the electrical mains
  - the electrical power supply/socket is adequate for maximum device power. If not, contact a qualified technician.
- The device should not be used as an activator for water heaters, stoves, etc., nor should it discharge into hot air/fume vent ducts deriving from any type of combustion unit. It must expel air outside via its own special duct.
- Operating temperature: -20°C up to +50°C.
- The device is designed to extract clean air only, i.e. without grease, soot, chemical or corrosive agents, or flammable or explosive mixtures.
- Do not leave the device exposed to atmospheric agents (rain, sun, snow, etc.).
- Do not immerse the device or its parts in water or other liquids.
- Only turn off the power supply to the unit whenever a malfunction is detected or in the case of inspection, cleaning or maintenance. Prolonged and/or repeated power interruption to the unit (any period more than 72 hours) can create a health and safety.
- For installation an omnipolar switch should be incorporated in the fixed wiring, in accordance with the wiring regulations, to provide a full disconnection under overvoltage category III conditions (contact opening distance equal to or greater than 3mm).
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not obstruct the fan or exhaust grille to ensure optimum air passage.
- Ensure adequate air return/discharge into/from the room in compliance with existing regulations in order to ensure proper device operation.
- If the environment in which the product is installed also houses a fuel-operating device (water heater, methane stove etc., that is not a "sealed chamber" type), it is essential to ensure adequate air intake, to ensure good combustion and proper equipment operation.

## INTRODUCTION

MORI HR NEXT is a alternate flow fan with heat retention, designed to ensure adequate ventilation in enclosed environments without energy losses. It is recommended that two units are installed in a pair: when one unit is extracting, the other is supplying air.


The pair of units can be installed in the same room or in different rooms (i.e. living-room and bedroom). The unit is suitable for installation on an outside wall.

**The unit should operate continuously, and only stopped for maintenance or service.**

**When heat exchange is not useful (for example in mid-seasons when indoor and outdoor temperatures are similar), or when heat exchange is not recommended (for example with the option "summer free cooling"), it is recommended to set the unit in "extract-only" or "intake-only" mode and NOT to switch it off.**


## Technical Specifications

- Design front cover (A) removable for cleaning without the use of tools.
- Inner ventilation unit (B) and wall support base (D) made of high quality, impact and UV-resistant ABS, colour RAL 9010.
- Integrated multi-colour led (C ) to obtain a visual feedback of the unit status.
- Smart humidity control.
- Integral temperature sensor for the automatic management of the inversion time (comfort mode).
- Automatic anti-frost protection to prevent frost building up on the heat exchanger.
- Wall support base (D) provided with a magnet "coupling/uncoupling" system which allows the ventilation unit to be removed from its base during maintenance.
- Back-up touch button (E) at the side of the ventilation unit.
- Unique design winglet-type impeller, providing enhanced aerodynamic properties, low noise and increased efficiency.
- High efficient reversible EC motor with integral thermal protection, mounted on sealed for life high quality ball bearings.
- Designed for continuous reversible running.
- Telescopic pipe (F) adaptable to the wall thickness.
- Antimortar cap designed to be used also as template during the installation of the wall support base.
- Regenerative heat exchanger with ceramic core (G) with high thermal efficiency, equipped with washable anti-dust filters (H).
- External grille (I) made of high quality, impact and UV-resistant ABS, colour RAL 9010, with anti-insect net and water drip guard.
- Infra-red remote controller with touch technology, LCD display and wall base supplied as standard. Made from ABS, RAL 9010.
- The unit is double insulated: no earth connection is required.
- No need of condensation drainage system.
- IPX4 degree of protection.
- Power supply 220V to 240V~ 50Hz.

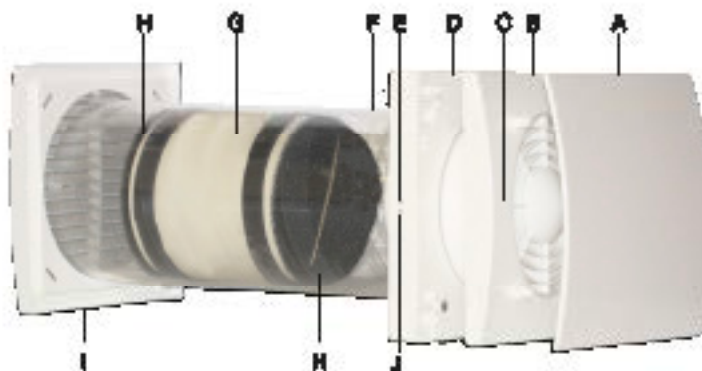

## OPERATION

### Remote Controller

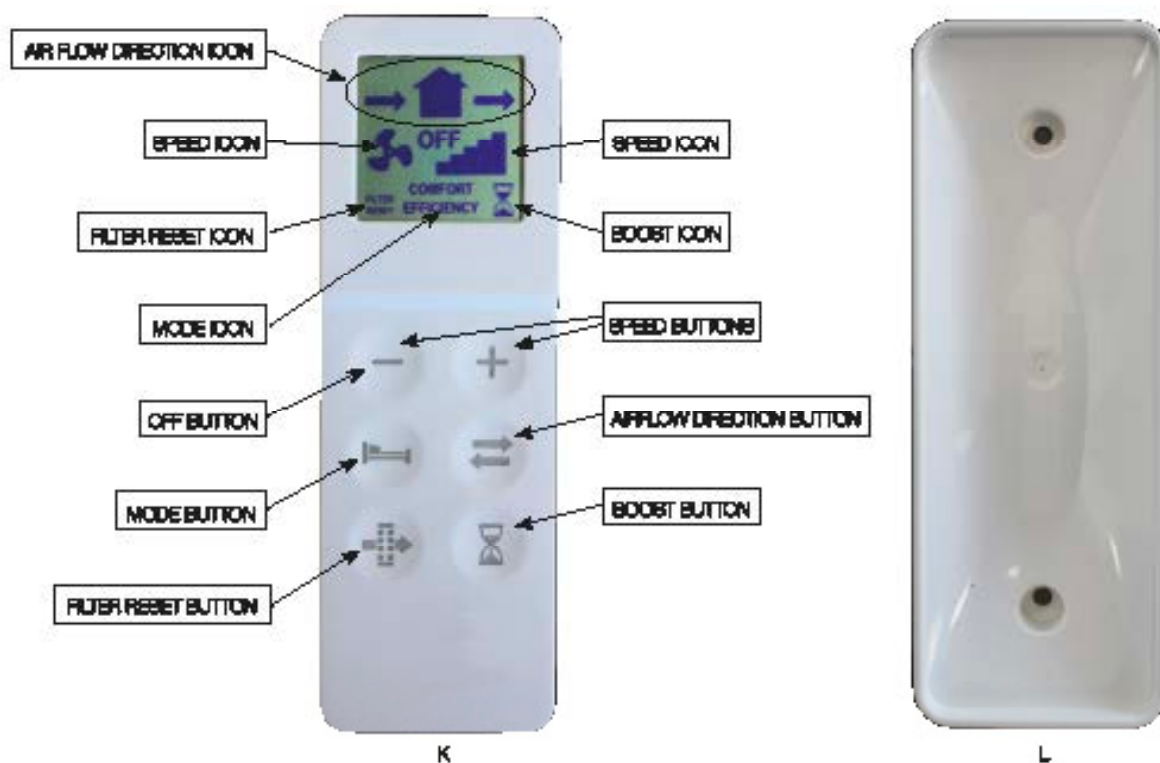


The unit is supplied with an infrared remote controller (K) as standard, as well as its support base (L) which can be wall mounted. A magnet keeps the controller attached to the base.

The controller is equipped with an LCD display to visualise the setting to be transferred to the unit; anytime a touch button is pressed, the setting shown on the LCD display is transferred to the unit. The IR receiver (J image pag.7) is placed on the left side of the ventilation unit: it is recommended to point the controller towards the receiver when any setting needs to be transferred.





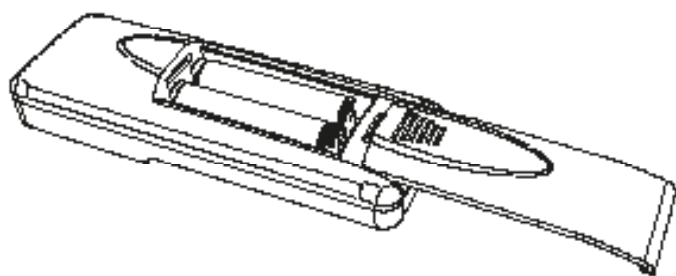






















One remote controller can control more units.

To activate the remote controller it is necessary to insert two AAA type batteries (not supplied).



## VENTILATION UNIT

When switched on the unit emits a long acoustic signal. Through the IR controller the following functionalities can be activated/deactivated. When one setting is transferred to the unit, a short acoustic signal is emitted and a green led flashes.


Functionality	Description	Controller Button	Icon	Led	Acoustic Signal
<b>Airflow direction</b>					
Alternate	The unit runs in extract/intake at the selected speed: the inversion time is automatically defined thanks to the integral temperature sensor.			Green	Short
Extract	The unit runs in extract only at the selected speed.			Green	Short
Intake	The unit runs in intake only at the selected speed.			Green	Short
<b>Mode (active only if the airflow direction is set on alternate)</b>					
Comfort	Optimisation of the acoustic and thermal comfort. The inversion time varies automatically from 40÷120 seconds, thanks to the integral temperature sensor. The first time cycle is of 120 seconds, then it varies automatically according to the detected temperature conditions.			Green	Short
Efficiency	Optimisation of the thermal efficiency. The inversion time is fixed at about 70 seconds.			Green	Short
<b>Continuous running speed</b>					
	Speed 1: 20m³/h			Green	Short
	Speed 2: 30m³/h			Green	Short
	Speed 3: 40m³/h			Green	Short
	Speed 4: 50m³/h			Green	Short
	Speed 5: 60m³/h			Green	Short
<b>Off position</b>					
	Pressing the — button for 3 seconds, the units. switches off, emitting a long acoustic signal. To re-activate the unit, press any button.		OFF	Red	Long
<b>BOOST speed</b>					
	The unit runs at speed 5 (maximum) for 15 minutes, in extract only; then it returns to the previously selected mode/speed. The BOOST speed cannot be activated if the controller is OFF.			Fixed Blue	Short
<b>Free Cooling</b>					
	The unit runs in “extract only” or “intake only” to avoid heat recovery when not needed.			Green	Short
<b>Filter reset</b>					
	Every 3 months a yellow warning LED switches on (fixed light) to indicate that the filters have to be maintained. Press the dedicated button for 5 seconds to reset the timing.		FILTER RESET	Green	Short
<b>Smart humidity control</b>					
	When the humidity sensor detects a quick variation of the Relative Humidity level, the running speed automatically increases to the next higher speed. After 10 minutes from the last quick RH variation, the unit returns running at the selected speed. The smart humidity control is active if the airflow direction is set on alternate or extract only: if speed 5 has been selected, no speed increase happens. To disable this functionality, press the  button for 5 seconds: on the top side of the LCD display the symbol • is shown.			Flashing Blue	

**Antifrost**

This functionality prevents frost building up on the heat exchanger due to extremely cold air. When it is activated, the unit runs in extract only at speed 1, for 30 minutes.

Fixed Red

**Acoustic signal**

Any time a setting is transferred from the controller to the unit, a short acoustic signal is emitted. This can be deactivated by pressing the  button for 7 seconds, after when a green led flashes to indicate that the acoustic signal is off. To reactivate the acoustic signal repeat the same operation for 7 seconds until the led becomes green and an acoustic signal is emitted.



Green

Short

**BACK UP BUTTON**

In case the remote controller gets lost or the batteries are dead, speeds 1,3 and OFF position can be selected from the on board touch button (C image pag.7). The airflow direction is always alternate and the operation mode (either comfort or efficiency) is the last selected from the remote controller.

Speed	Led Colour	Acoustic Signal
Speed 1	Single green LED	Short, single
Speed 3	Double green LED	Short, double
OFF	Red LED	Long

**SYNCHRONISATION OF A NUMBER OF UNITS**

It is possible to synchronized up to 10 units contemporaneously, through wire (2 pole twisted pair type , max 30m length) so to have mode and inversion time synchronized. When the unit is switched on for the first time, the rotation direction of each unit (clockwise or anti-clockwise) is automatically established. Other functionalities like speed, smart humidity control and boost , continue to be controlled independently on each single unit.

Wiring diagram as per Fig. 16 B

**MAINTENANCE**

Maintenance should be performed only by technically qualified personnel in accordance with local roles and regulations. Make sure the mains supply to the unit is disconnected before carrying out any inspection, cleaning, maintenance or repairs. Inspection and cleaning should be carried out as required at regular intervals not exceeding 12 months.

**STANDARD CONFORMITY**

2014/35/UE Low Voltage Directive (LVD) and 2014/30/UE Electromagnetic Compatibility (EMC), in conformity with the following standards:





Electrical Safety

EN60335-1(2012)+A11+A13; EN 60335-2-80(2003)+A1+A2


Electromagnetic Compatibility

EN 55014-1(2017); EN 55014-2(2015); EN 61000-3-2(2014); EN 61000-3-3(2013).


DIMENSIONS (MM)

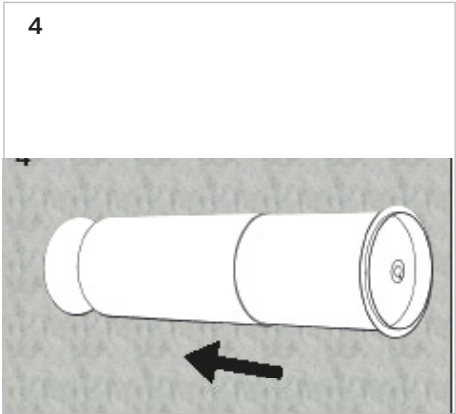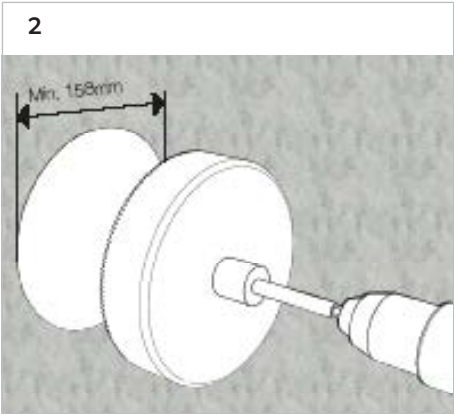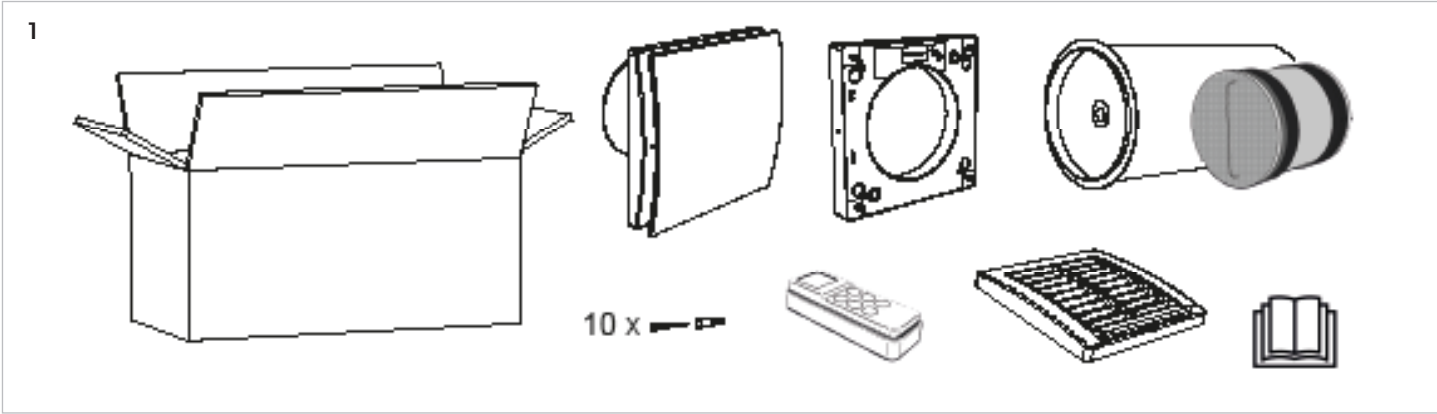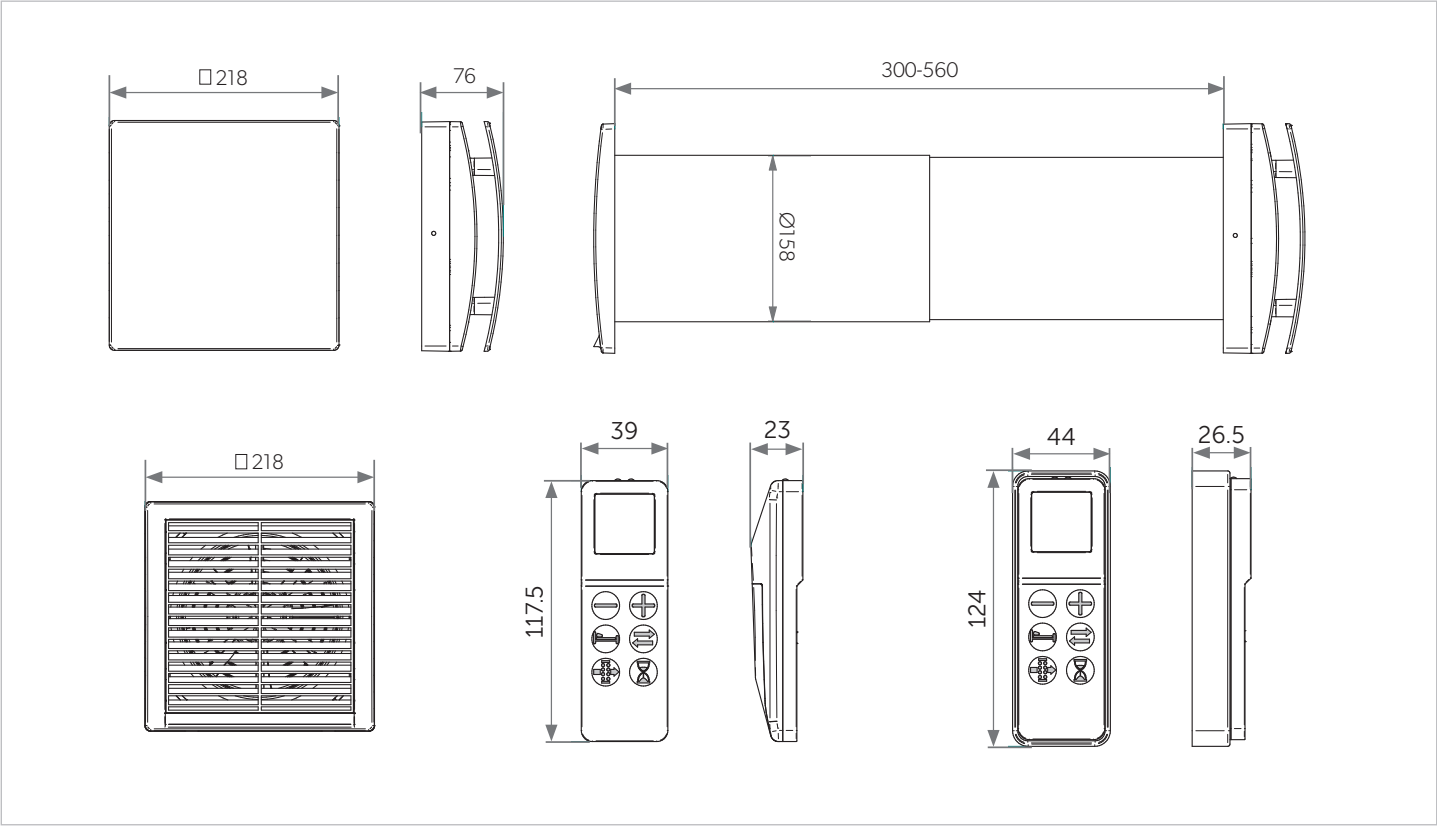


5

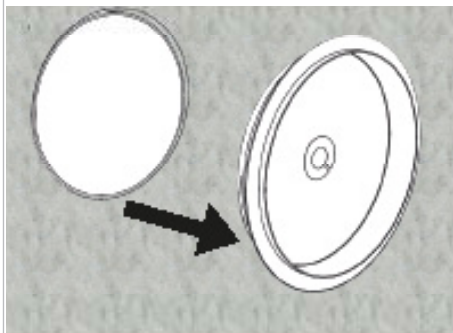

6

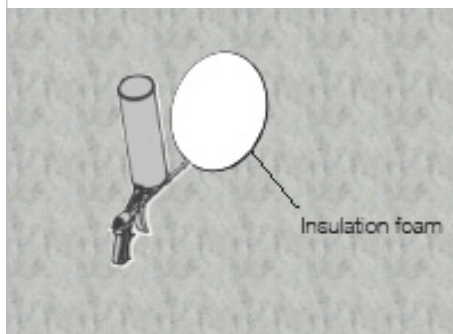


7

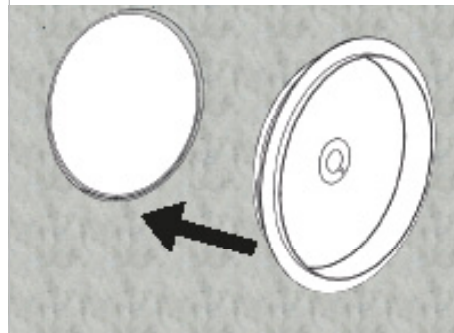


# RECESSED CABLE ENTRY

H03VV-F; H05VV-F  
2 X 0.5 ÷ 1.5 mm<sup>2</sup>


8

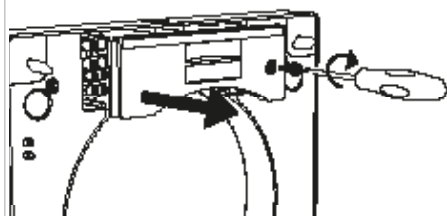


9

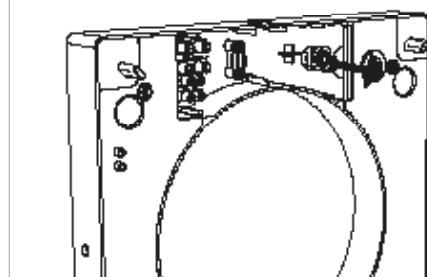


10

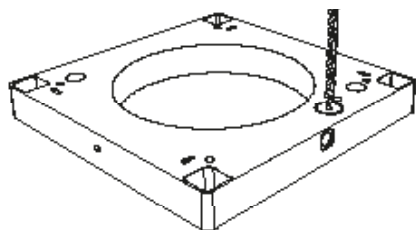


11

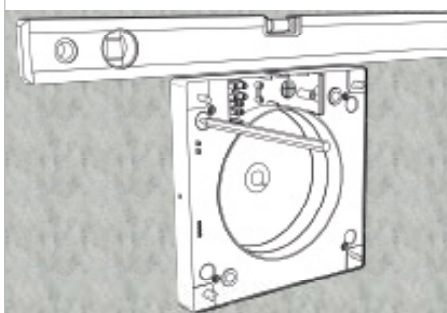


12

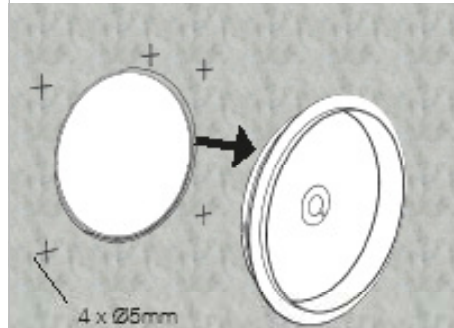


13

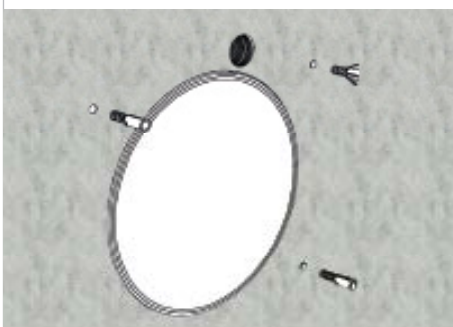

14

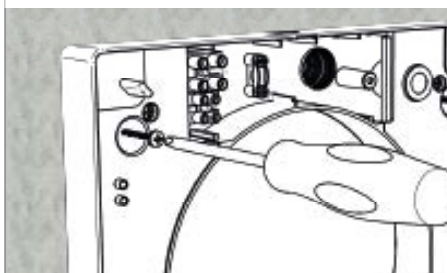


15

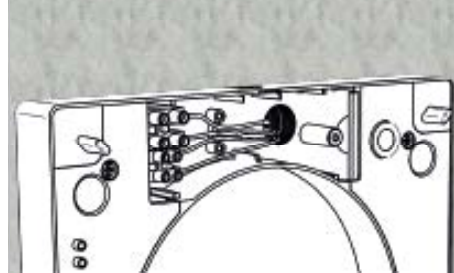




8.


16a

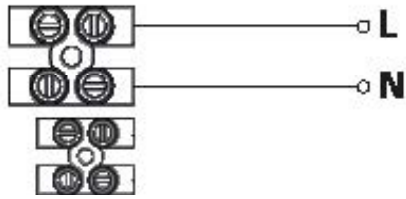


16b

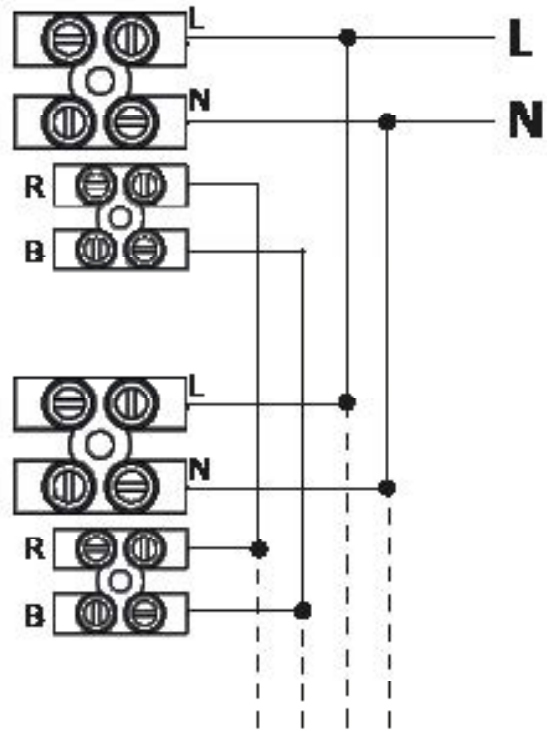


17

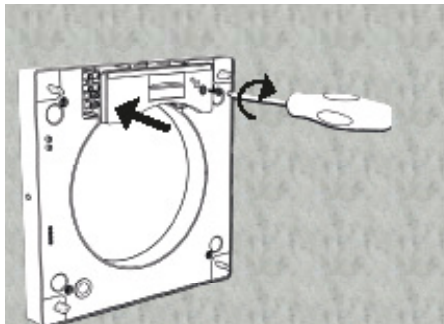


18

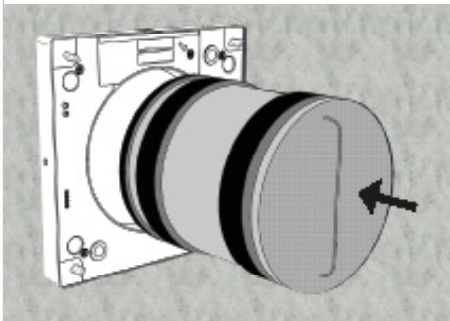


19

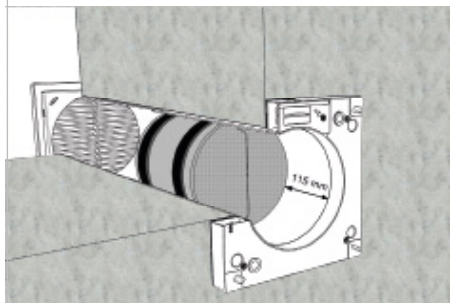


20

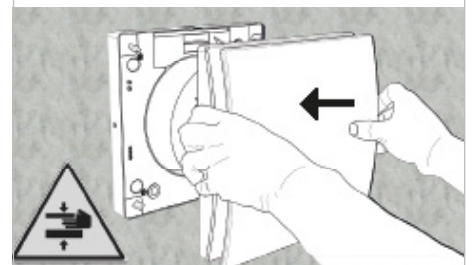

21

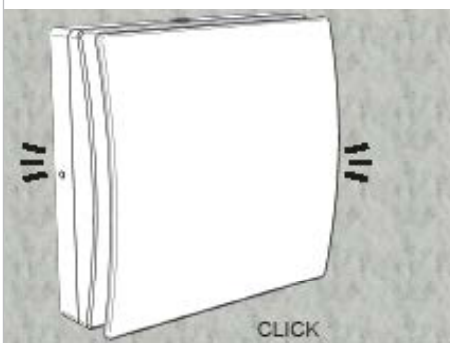

22

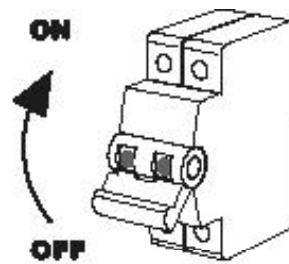





**SURFACE CABLE**  
(for one unit wiring)

H03VV-F ; H05VV-F  
2 X 0.5 ÷ 1.5 mm<sup>2</sup>


23

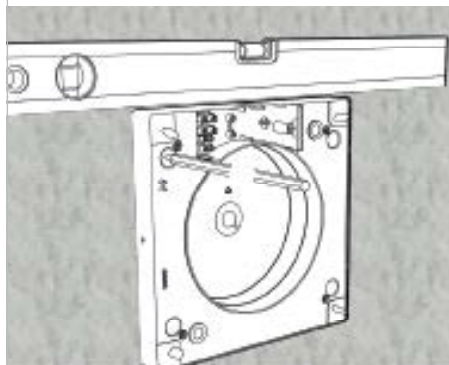


24

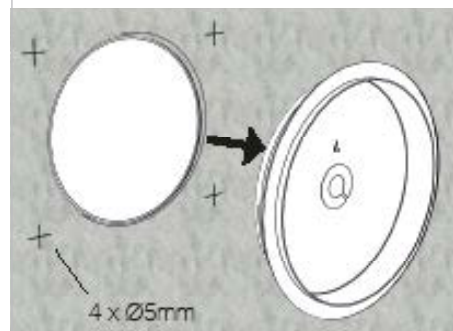


25

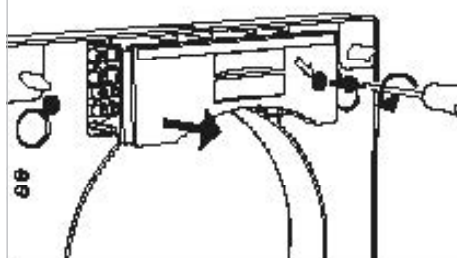


26

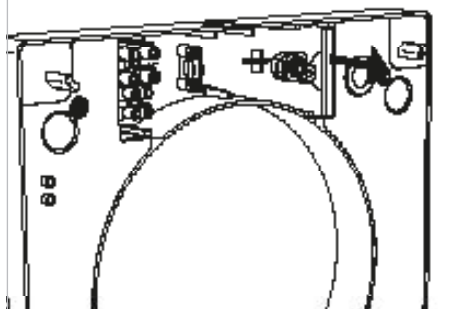


27

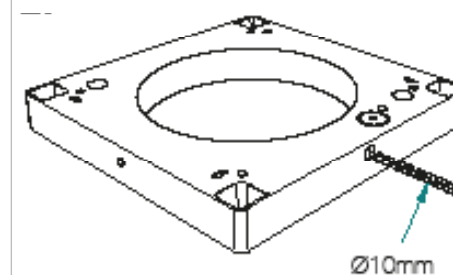


28

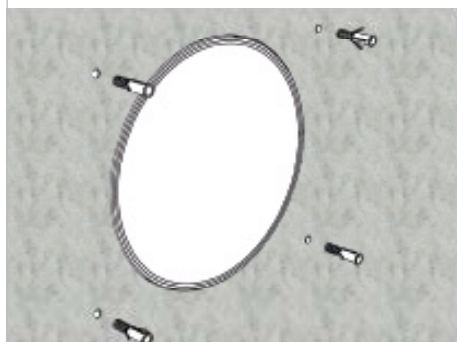


29

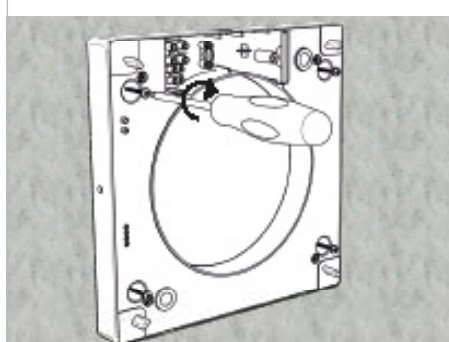


30

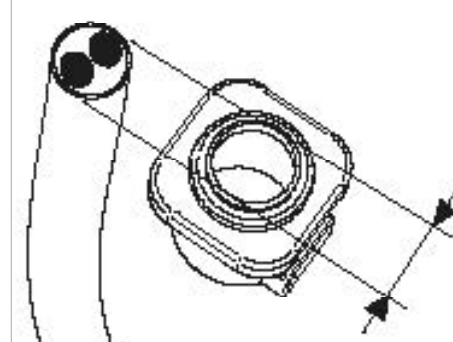


31

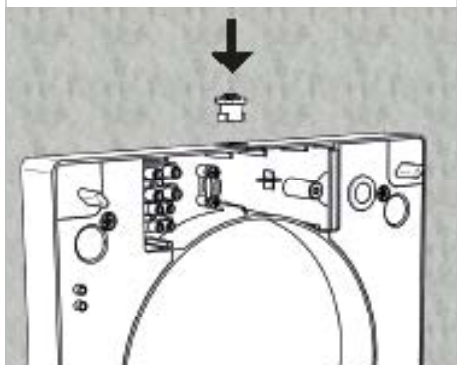









32

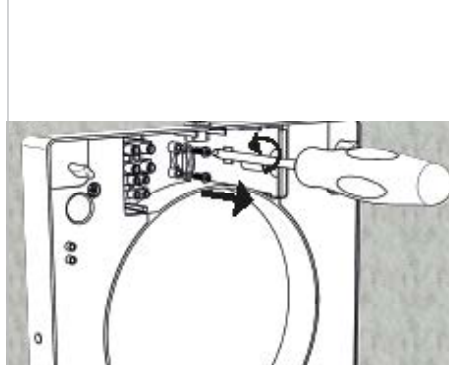




33

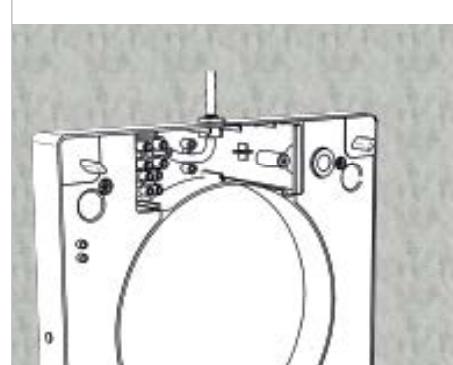


10.

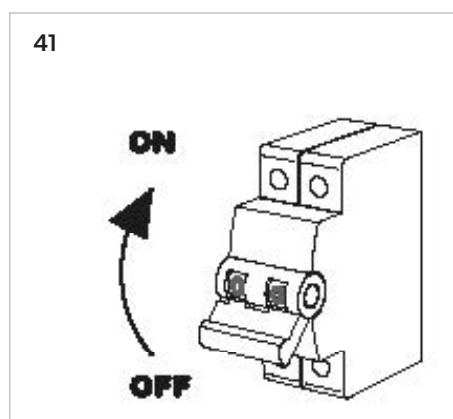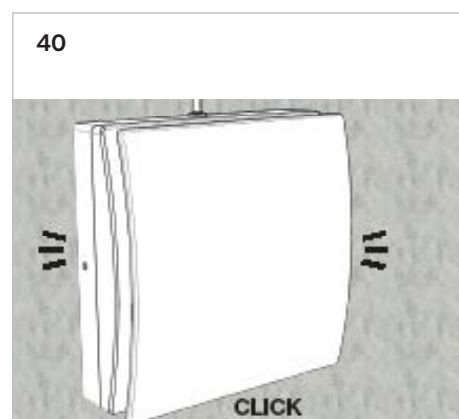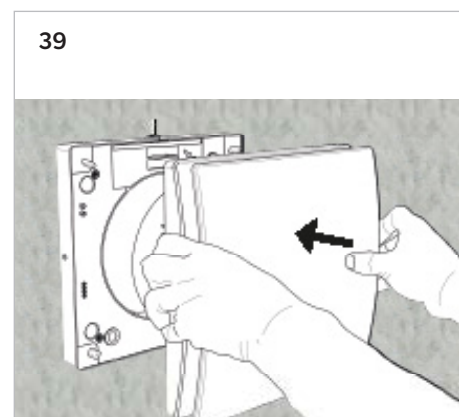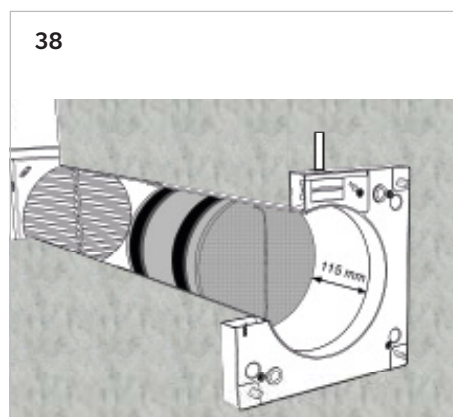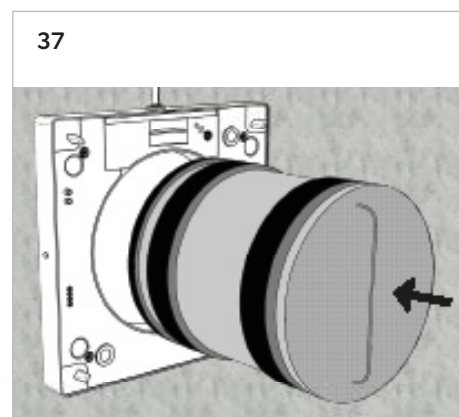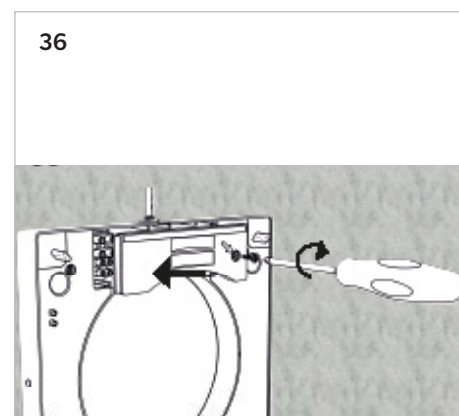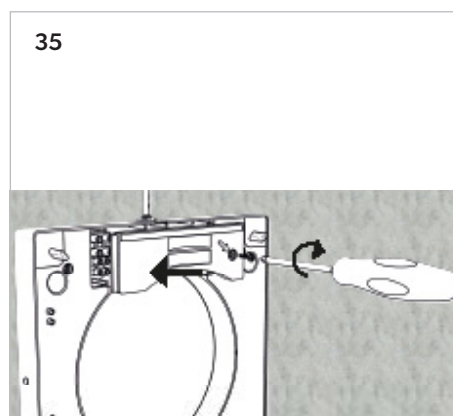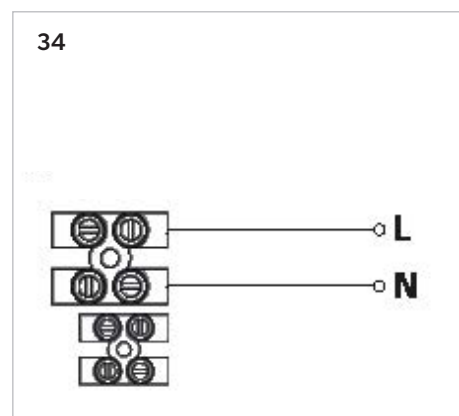

## REMOTE CONTROLLER WALL MOUNTING

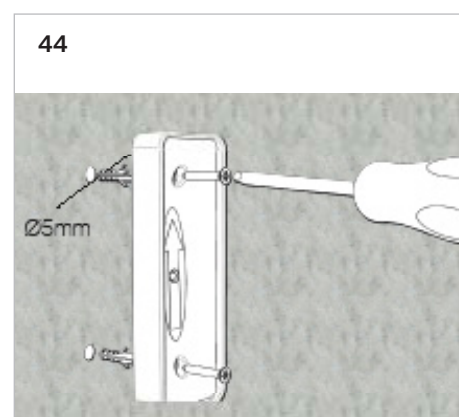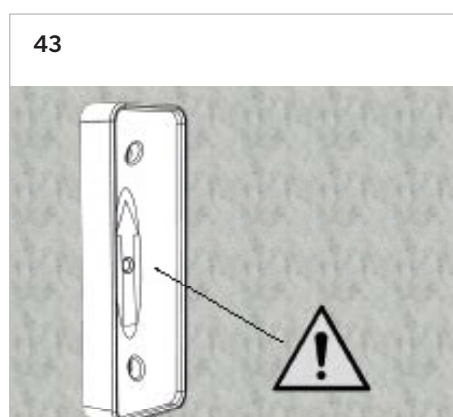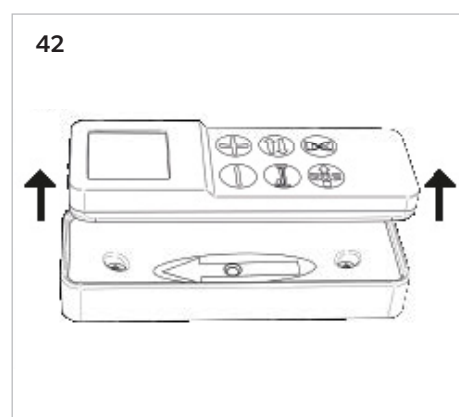


45

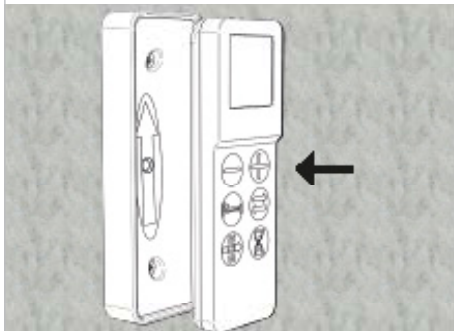


## EXTERNAL GRILLE


46

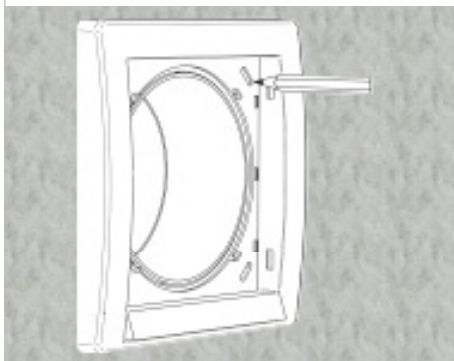

47

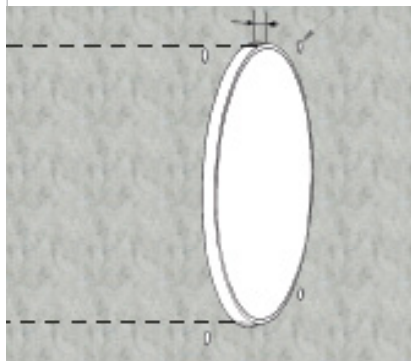


48

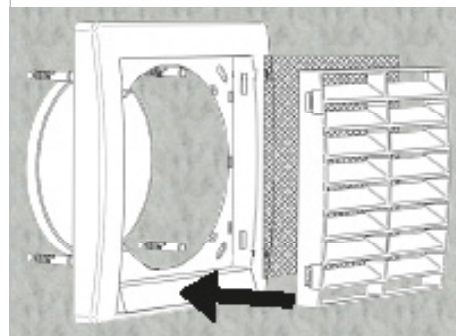


## MAINTENANCE


49

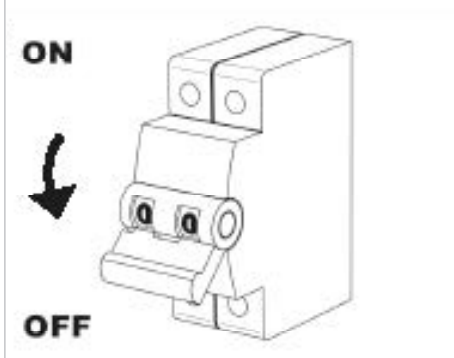

50

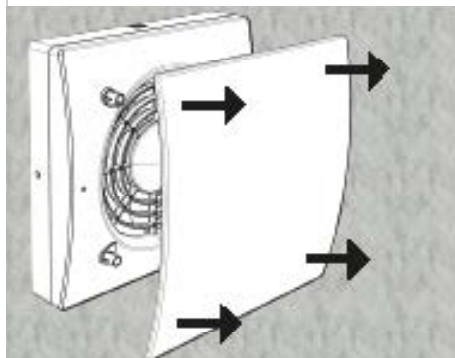


51

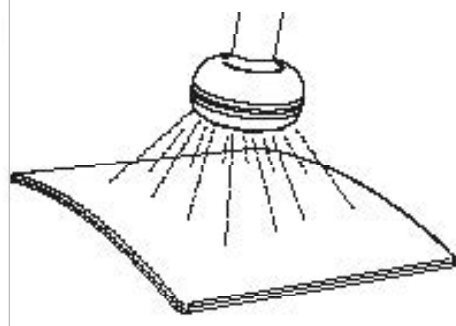





52

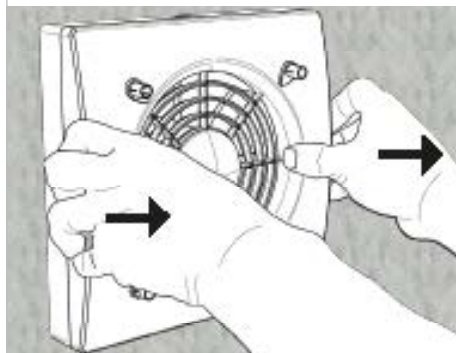


53

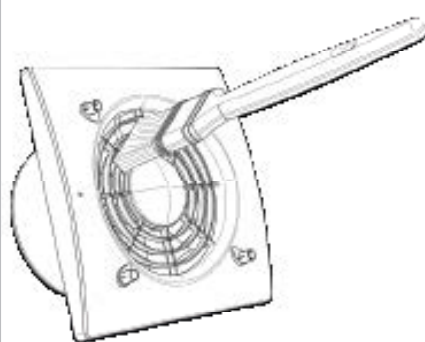


54

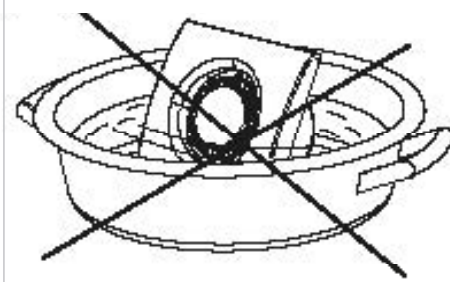


55

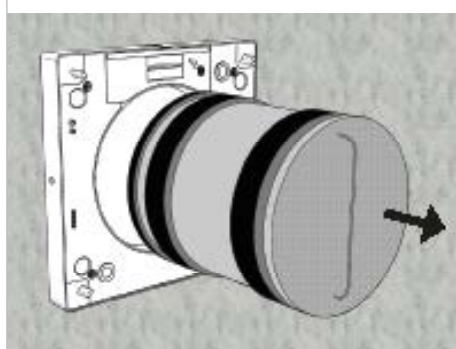


56

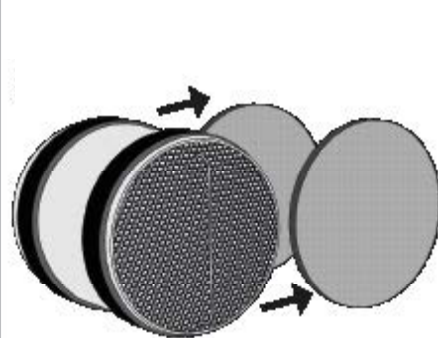


57

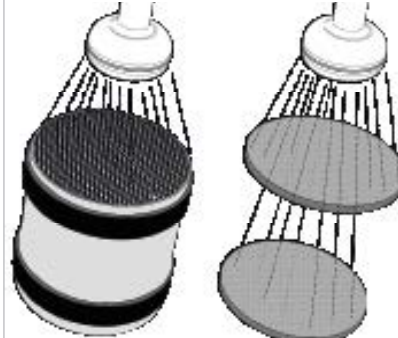


58

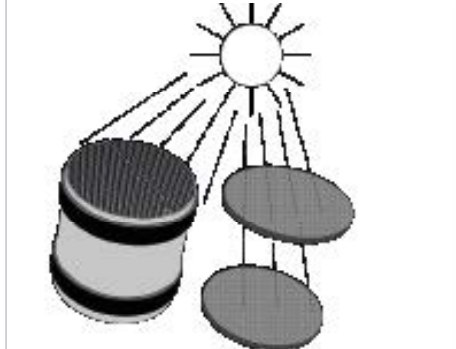


59

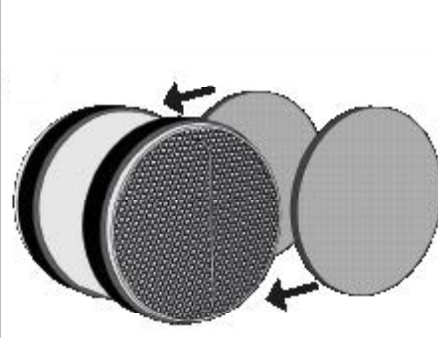


60

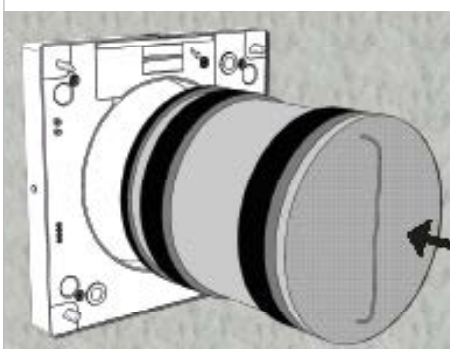


61


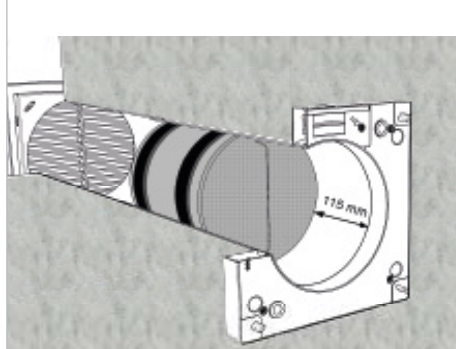


62

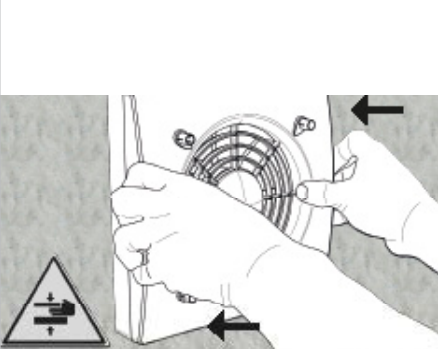



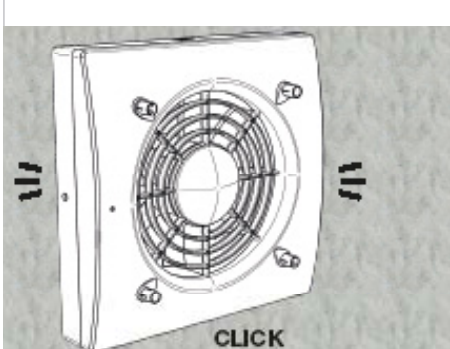


63

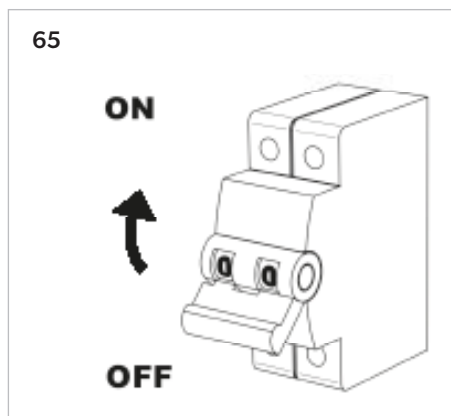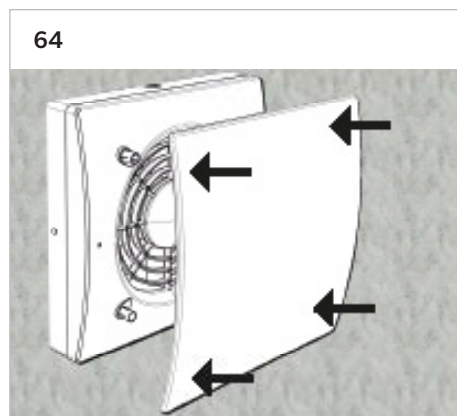



## TROUBLE SHOOTING

Anomaly	Possible Cause	Solution
No icon shown on the controller LCD display	Batteries are dead	Change the batteries
	Batteries are not present	Check that batteries are in there
	Batteries are wrongly positioned	Position the batteries correctly
The unit does not execute the command sent from the remote control	Lack of communication between the unit and the remote controller	Go closer to the unit, pointing the controller to the receiver on the left side of the unit
The unit does not operate	There is no voltage	Check that the unit is correctly wired to the main supply
	Ventilation unit does not couple correctly with the support base	Check that the coupling is properly done
The unit operates at the maximum speed	The Boost functionality is activated, on the display the icon is  shown	Wait until the boost timing ends (15 minutes) or deactivate the boost function pressing the  button.
Unit speed suddenly increases	The smart humidity control is activated	Wait until the smart humidity control phase ends (10 minutes) or deactivate the humidity control function pressing the  button for 5 seconds.
Fixed yellow led	Dirty filters	Filters maintenance/replacement is needed: reset filter operation has to be done (see page 5)
Fixed red led	Antifrost protection is activated	Wait until the antifrost phase ends (30 minutes)
Fixed blue led	Boost is activated	Wait until the boost timing ends (15 minutes) or deactivate the boost function pressing the  button.
Flashing blue led	Smart humidity control is activated	Wait until the humidity control phase ends (10 minutes)
Fixed purple led	Ventilation unit does not couple correctly with the support base	Check that the coupling is properly done
Acoustic signal to disable	-	Press the  button for 7 seconds: a green led flashes.

## ERP DIRECTIVE - REGULATIONS 1253/2014 - 1254/2014

a)	Mark	-	Homevent
b)	Model	-	MORI HR NEXT
c)	SEC class	-	A
c1)	SEC warm climates	kWh/m <sup>2</sup> .a	-18.1
c2)	SEC average climates	kWh/m <sup>2</sup> .a	-41.7
c3)	SEC cold climates	kWh/m <sup>2</sup> .a	-83
	Energy label	-	Yes
d)	Unit typology	-	Residential - bidirectional;
e)	Type of drive	-	Multi-speed drive
f)	Type of Heat Recovery System	-	Heat recovery;
g)	Thermal efficiency of heat recovery	%	74
h)	Maximum flow rate	m <sup>3</sup> /h	60
i)	Electric power input at maximum flow rate	W BT	6
j)	Sound power level (LWA)	dBA	40
k)	Reference flow rate	m <sup>3</sup> /h	41
l)	Reference pressure difference	Pa	10
m)	Specific power input (SPI)	W/m <sup>3</sup> /h	0.08
n1)	Fattore di controllo - Control factor	-	0.65
n2)	Control typology	-	Local demand control;
o1)	Maximum internal leakage rate	%	N/A
o2)	Maximum external leakage rate	%	1
p1)	Internal mixing rate	%	N/A
p2)	External mixing rate	%	N/A
q)	Visual filter warning	-	N/A
r)	Instructions to install regulated grilles	-	N/A
s)	Internet address for preassembly/disassembly instructions	-	<a href="http://www.homevent.co.uk">www.homevent.co.uk</a>
t)	Airflow sensitivity to pressure variations	%	N/A
u)	Indoor/outdoor air tightness	m <sup>3</sup> /h	50
v1)	AEC - Annual electricity consumption - warm climates	kWh	0.6
v2)	AEC - Annual electricity consumption - average climates	kWh	0.6
v3)	AEC - Annual electricity consumption - cold climates;	kWh	0.6
w1)	AHS - Annual heating saved - warm climates;	kWh	19.5
w2)	AHS - Annual heating saved - average climates;	kWh	43.2
w3)	AHS - Annual heating saved - cold climates;	kWh	84.4



DISPOSAL AND RECYCLING

Information on disposal of units at the end of life.

This product complies with EU Directive 2002/96/EC.

The symbol of the crossed-out dustbin indicates that this product must be collected separately from other waste at the end of its life. The user must, therefore, dispose of the product in question at suitable electronic and electro-technical waste disposal collection centres, or else send the product back to the retailer when purchasing a new, equivalent type device.

Separate collection of decommissioned equipment for recycling, treatment and environmentally compatible disposal helps to prevent negative effects on the environment and on health and promotes the recycling of the materials that make up the equipment.

Improper disposal of the product by the user may result in administrative sanctions as provided by law.



WARRANTY

Our 5 year warranty is provided only to customers who purchased directly from us. If you purchased elsewhere then please contact them directly and they will let you know their warranty procedure. Our warranty covers repair or replacement of defective goods only. It does not cover any labour costs associated with defective product or component removal or installation, nor does it cover the cost of sending goods back to us for inspection. Our warranty is subject to storage, installation, commissioning, inspection and maintenance having been carried out in accordance with our Installation and Maintenance Instructions (supplied with each product) and which are also available to view, save or print from our website.



**Tel:** +44 (0) 1384 275822, **Email:** [sales@homeevent.co.uk](mailto:sales@homeevent.co.uk)

46 Third Avenue, Pensnett Trading Estate, Kingswinford, West Midlands, DY6 7US, UK

**[www.homeevent.co.uk](http://www.homeevent.co.uk)**

A MEMBER OF  **ELTA  
GROUP**

MORI HR NEXT. ISSUE A. 03.21